

Single Phase Power Details, Cable, Plugs and Sockets.

SPACEWISE BUTCHER DOOR UNITS SERIES SPWU 100 REQUIRE SINGLE PHASE 240 VOLT 3 PIN POWER SUPPLY.

The customers R.C.D. should be fitted with a 32 amp motor rated breaker C or D type to prevent the switch from tripping during machine start up along with a 32amp BLUE commando socket.

The external socket should also be fitted with an isolator.

Spacewise provides an 18 metre extension lead with each container. We can provide additional extension leads, complete with plug and sockets. There is normally a charge for this item.



EXAMPLE OF CUSTOMER'S EXTERNAL ISOLATED POWER SOCKET

Power Cable, Plugs and Sockets.

SPACEWISE BUTCHER DOOR UNITS REQUIRE 3 PHASE 440 VOLT 5 PIN POWER SUPPLY. 3X PHASE 1X EARTH CONNECTION 1X NEUTRAL CONNECTION.

The R.C.D. should be fitted with a 32 amp Type "C" or "D" motor rated breaker to prevent the switch from tripping during machine start up.

Spacewise will provide extension leads if required, complete with plug and sockets, however there is normally a charge for this item.



Spacewise commissioning / service engineers are equipped to test the supply and will advise if the socket needs replacement or a defect is found. **Spacewise is unable to undertake replacement or repair to any stores power supply.**